

# HAPILIN®

MINI SILICONE  
FACIAL BRUSH



[www.hapilin.com](http://www.hapilin.com)

# HAPILIN®

MINI SILICONE  
FACIAL BRUSH




[www.hapilin.com](http://www.hapilin.com)

## فرشاة الوجه السيليكون

صممت فرشاة الوجه السيليكون بطريقة مبتكرة مع شعيرات سيليكون فائقة النعومة التي تجعلها الأسبب في توفير العناية لبشرتك. والأهم من ذلك، أنها مناسبة للانتقال في أي مكان لصغر حجمها، بالإضافة إلى أنها مقاومة للماء وقابلة لإعادة الشحن، وتتميز بنظام اهتزاز يعمل بثلاث سرعات مختلفة حيث يمكنك الاختيار بينهما بسهولة. للتخلص من الأوساخ والشوائب والزيوت وتقليل المسام الواسعة. ويمكنك أيضاً عمل جلسة تدليك لعضلات وجهك مما يقلل الخطوط الدقيقة والتجاعيد.

1. شعيرات السيليكون
2. مؤشر LED
3. زر التشغيل والتحكم في السرعة
4. نقاط التدليك
5. منطقة الشحن
6. غطاء حماية مقاوم للماء
7. وصلة الشحن USB

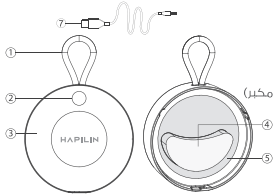

### علبة حفظ الفرشاة:

1. حلقة للتعليق
2. منطقة مقعرة في الغطاء (مكبّر)
3. الغطاء
4. مغناطيس
5. موضع تخزين وصلة USB

## المواصفات:

اسم المنتج: Hapilin® Mini Silicone Facial Brush

رقم الموديل: HA-1769D

الجهد: 3,7 فولت

القوة: 1,5 واط

التيار: 0.3 أمبير

مقاومة الماء: IPX7

سرعة الاهتزازات: 7500 اهتزازة في الدقيقة

مزود الطاقة: بطارية ليثيوم (مدمجة)

الشحن: بواسطة USB

زمن الشحن: ساعتان ونصف

مدة التشغيل: ساعتين (60 مرة)

مؤقت التشغيل: دقيقتان

## الخصائص:

● **شعيرات سيليكون فائقة النعومة:** لطيفة على الجلد وتعمل على فتح المسام المغلقة، والتخلص من الأتربة والشوائب، وإزالة الرؤوس السوداء والبيضاء، كما أنها تزيل الجلد الميت.

● **نظام اهتزاز يعمل بثلاث سرعات:** يصل إلى 10000 اهتزازة في الدقيقة الواحدة ويعمل على تدليك الوجه، وإزالة الخطوط الدقيقة والتجاعيد أثناء استرخاء عضلات الوجه. كما يمكنك ضبط السرعة حسب النتائج المرغوبة ونوع الجلد.

● **صغيرة الحجم:** ليسهل حملها والانتقال بها في أي مكان حتى أثناء السفر.

● **مؤشر LED:** يوجد 3 مؤشرات ضوئية تعبر عن حالة الشحن والسرعة الحالية.

● **تعمل لاسلكياً وقابلة لإعادة الشحن:** فهي قابلة لإعادة الشحن بسهولة بواسطة وصلة الشحن USB التي يمكن توصيلها بأي محول شحن.

● **مقاومة للماء:** الفرشاة مقاومة للماء بأكثر من 7 مرات (IPX7) والذي يجعلها تصلح للاستخدام حتى أثناء الاستحمام.

## مؤشرات LED:

- **المؤشر الأيسر فقط:** يضيء عند ضبط الفرشاة على أقل سرعة.
- **المؤشر الأيسر والأوسط معاً:** يضيء عند ضبط الفرشاة على مستوى السرعة الأوسط.
- **جميع المؤشرات:** تضيء عند ضبط الفرشاة على أعلى سرعة.
- **وميض المؤشر الحالي:** عندما تكون البطارية أقل من 30% وذلك لتذكيرك بالشحن، وعندما تكون البطارية أقل من 10%، يومض لمدة 3 ثوانٍ ثم يتم غلق الفرشاة تلقائياً.
- **وميض المؤشرات:** تومض المؤشرات الثلاثة بالتوالي لعرض حالة الشحن.
- **جميع المؤشرات:** تضيء جميع المؤشرات عند اكتمال الشحن.

## تعليمات التشغيل:

1. قمومي بالضغط على زر التشغيل لمدة ثانيتين وسيتم تشغيل الفرشاة تلقائياً على مستوى السرعة المنخفضة.
  2. اضغطي على زر التشغيل مرة واحدة لاختيار السرعة المرغوبة من بين الثلاث سرعات.
- ملحوظة:** يحفظ الجهاز السرعة التي كنت عليها آخر مرة قبل الإغلاق، لذلك بمجرد تشغيل الفرشاة مرة أخرى فإنها تبدأ بنفس السرعة.
3. اضغطي على زر التشغيل لمدة ثانيتين لإطفاء الفرشاة.
- ملحوظة:** يقوم الجهاز بالإطفاء تلقائياً بعد دقيقتين من الاستخدام المتواصل.

## طريقة الاستخدام :

### • قبل الاستخدام:

1. تأكدي من شحن الفرشاة بنسبة 100%.
2. تأكدي دائماً من تثبيت غطاء الحماية المقاوم للماء في منفذ الشحن لحماية من الماء أثناء الاستخدام.
3. قومي بإزالة كل آثار المكياج من وجهك.
4. قومي بترطيب وجهك بالماء.

### • وضع تنظيف الوجه:

1. قومي بتشغيل الفرشاة.
2. ضعي منظف البشرة المفضل لديك على شعيرات السيليكون بالجزء الأمامي للفرشاة.
3. قومي بتكوين رغوة باستخدام يدك أو وجهك.
4. حركي الفرشاة على وجهك بالكامل برفق في حركات دائرية من أسفل إلى أعلى لفتح المسام وإزالة جميع الشوائب والأتربة.
5. لتنظيف منطقة الجبهة قومي بتحريك الفرشاة ابتداءً من المركز إلى الخارج بلطف.
6. لتنظيف منطقة أسفل العين قومي بتحريك الفرشاة بلطف من الداخل إلى الخارج ولكن قبل البدء ينصح بتقليل سرعة اهتزاز الفرشاة.
7. لتنظيف الأنف قومي بتحريك الفرشاة بلطف لأعلى وأسفل على كلا الجانبين.
8. بمجرد الانتهاء، اشطفي وجهك بالماء البارد لإغلاق المسام.

## • وضع تدليك الوجه:

1. قومي بوضع أي كريم مرطب أو سيروم مفضل على وجهك، سيسمح ذلك بتحريك الفرشاة على بشرتك بسلاسة أكثر.

2. قومي بتشغيل الفرشاة.

3. قومي بتدليك بشرتك بلطف باستخدام الوجه الخلفي من فرشاة السيليكون فذلك سيريح عضلات وجهك ويعمل على إزالة الخطوط الدقيقة والتجاعيد، كما أنه سيسمح بامتصاص منتج العناية بالبشرة بفعالية.

## نصائح الاستخدام:

- لا ينبغي استخدام الفرشاة على منطقة واحدة في وجهك لأكثر من دقيقة.
- ينصح باستخدام الفرشاة مرتين يوميًا.

## طريقة الشحن:

1. قومي بإزالة غطاء الحماية المقاوم للماء بدفعه للخارج.
2. قومي بإدخال وصلة الشحن USB في منفذ الشحن بالفرشاة والتي يمكن توصيلها بأي محول شحن.

## ملحوظة:

- أثناء الشحن تومض المؤشرات الثلاثة بالتوالي لعرض حالة الشحن.
- عند اكتمال الشحن ستضيء جميع المؤشرات معاً.

## التنظيف والتخزين:

### • التنظيف:

1. بعد كل استخدام، قومي بغسل الفرشاة جيداً بالماء الفاتر لإزالة جميع منتجات العناية بالبشرة المتبقية حتى تصبح نظيفة تمامًا ثم قومي بمسحها بقطعة قماش غير منسلة.
2. اتركي الفرشاة في للهواء حتى تجف تمامًا.

### • للتخزين:

1. ضعي وصلة الشحن USB في مكانها المخصص داخل علبة حفظ الفرشاة.
2. ضعي الفرشاة فوق المغناطيس داخل علبة حفظ الفرشاة.
3. أعيدي غطاء علبة حفظ الفرشاة بحيث يكون المكبر في المنتصف ثم قومي بتدويره في عكس اتجاه عقارب الساعة.

## تعليمات السلامة:

- يحذر استخدام الفرشاة بدون إدخال غطاء الحماية المقاوم للماء في منفذ الشحن.
- لا يجب استخدام الجهاز في حالة وجود أي تورم بالجلد أو جراحة أو حروق شمس أو أي أعراض جلدية أخرى.
- تجنب الاتصال المباشر مع العين والجفون أثناء الاستخدام.
- لا تستخدم الفرشاة في نفس المنطقة لفترة طويلة.
- لا تستخدم منشفة أو كريم قابل للذوبان في السيليكون، أو كريم خبيبي صلب مثل كريمات التفتيح.
- الجهاز مخصص للاستخدام الشخصي ويحذر مشاركته مع أكثر من شخص.
- احرصي دائماً على تنظيف الفرشاة بعد كل استخدام.
- يحذر غمر الفرشاة داخل الماء لفترة طويلة، ولكن اكتفي بشطفها من الخارج.
- يحذر تنظيف الجهاز بالكحول، والأسيتون، والبنزين، أو أي منتجات مسببة لتآكل السيليكون.
- تجنب ترك الجهاز معرضاً لضوء الشمس المباشر أو درجات الحرارة العالية أو تعريضه للماء المغلي.
- يحفظ الجهاز بعيداً عن متناول الأطفال خلال الاستخدام وحتى بعد الانتهاء.
- يحذر استخدام الجهاز للأطفال أقل من 8 سنوات.
- لا تستخدم الجهاز إذا تعرضت شعيرات السيليكون للتلف.
- يحذر استخدام الجهاز أثناء الشحن.
- يحذر الشحن بأي وصلة شحن أخرى بخلاف المرفقة مع الجهاز.
- قبل الشحن، تأكد من عدم تعريض منفذ الشحن أو وصلة الشاحن للماء.
- تجنب شحن الجهاز لأكثر من 12 ساعة متواصلة في كل مرة، وقومي بإزالته من الشحن بمجرد اكتمال الشحن.
- افحصي الفرشاة دائماً قبل كل استخدام، ويجب ألا تستخدم إذا كان تالفه.
- يحذر تعديل أو صيانة أو تفكيك الجهاز لأي سبب من الأسباب.



## خطاب الضمان:

الجهاز حاصل على شهادات CE + RoHS المطابقة للأمان والسلامة الأوروبية، ومصنع طبقاً لمعايير الجودة الأمريكية ويأتي مع ضمان استرجاع لمدة 14 يوماً وذلك من تاريخ الاستلام المثبت على الفاتورة، وتمتد إلى 30 يوماً في حالة وجود عيب تصنيع، ويأتي أيضاً مع ضمان صيانة لمدة عامين. في حالة توقف عمل الجهاز الخاص بك في غضون أول عامين من الشراء، يرجى التواصل معنا عن طريق البريد الإلكتروني [warranty@hapilin.com](mailto:warranty@hapilin.com) موضحاً المشكلة وسيتم عمل اللازم حرصاً على إرضائك.

## الضمان المقدم يغطي عيوب التصنيع فقط ولا ينطبق على الحالات التالية:

- الإهمال وسوء استخدام المنتج.
- كسر الجهاز.
- الأضرار الناجمة عن محاولة إصلاح الجهاز من قبل طرف غير مصرح به.

**تنبيه:** ضمان الاسترجاع لا يسري في حالة الاستخدام الشخصي للجهاز.

يتم الكشف عن الجهاز قبل الشحن ونتيجة لذلك، أي ضرر أو خدش يحدث على الغلاف الخارجي لا يغطيه الضمان. تتحمل الشركة كافة التكاليف لإصلاح/استبدال الجهاز الخاص بك في حالة حدوث عيب تصنيع بالإضافة إلى تكاليف الشحن، ويتحمل العميل تكلفة الشحن في حالة عدم وجود أي عيب تصنيع. يجب إرسال الجهاز في العلبة الأصلية مع وصل الشراء عن طريق شركة الشحن، ويمكن تتبعها.

برجاء الحفاظ على هذا الضمان مع الجهاز الخاص بك بحيث يكون في متناول يديك في حالة مواجهة أي مشكلة.

## **Letter of Guarantee:**

This appliance has a CE and ROHS marking and is compliant with the health, safety, and environmental protection standards of the European Economic Area. It also complies with the American Quality and Safety Standards.

It comes with a 14-day money-back guarantee which starts from the day of invoice on the receipt. It can extend to 30 days in the case of a manufacturing defect. It also comes with a 2-year repair warranty.

In the event your appliance stops working within the first 2 years of purchase, please contact us by sending an email to [warranty@hapilin.com](mailto:warranty@hapilin.com) explaining the problem clearly. We will then be happy to advise you on what to do to ensure your satisfaction.

**The warranty applies to manufacturing defects only and does not apply to the following cases:**

- Negligence and product misuse.
- Breaking or cracking the appliance.
- Damage caused by an attempt to repair the appliance by an unauthorized party.

**Important:** The money-back guarantee is not applied in the case of personal use of the product.

The appliance has been inspected prior to shipment, so any damage or crack occurring to the outer casing is not covered by this warranty.

As a company, we will be responsible for any costs incurred for repair/replacement of your appliance in the event of a manufacturing fault, in addition to the return shipping costs. However, you will be responsible for shipping costs for the return of the original appliance, if the fault is not a manufacturing one, which must be sent back using a trackable/traceable delivery service, returned in its original box with the original purchase receipt.

**Please keep this warranty document with your appliance so that it is handy in the event a problem arises.**

## **Safety Matters:**

- Do not use the device without making sure the water-resistant cover is inserted in the charging Port.
- Do not use the device if you have swelling, or have had surgery, sunburn, or other skin problems.
- Avoid contact with eyes.
- Do not use on the same area for a long time.
- Do not use your device with a silicone soluble cleanser or cream, granular or gritty cleansing creams, exfoliating creams, or clay-based products.
- The device is intended for personal use so do not share the same device with others.
- Always keep the device clean after use.
- Do not immerse the device in water. It can only be externally rinsed.
- Do not clean the device with alcohol, acetone, petrol, or anything that could erode the silicone.
- Avoid leaving your device in direct sunlight, near to heat, or boiling water.
- Do not use on children and keep out of reach of children.
- Keep the device and cable out of reach of children under 8 years.
- Do not use if silicone is damaged.
- Do not power it on when charging.
- Never charge with any other charging device other than what is supplied at the time of purchase.
- Before charging, ensure the battery port and cable are free from water and any wet substance.
- Do not charge your device for more than 12 hours at a time. Remove from charging when the battery is fully charged.
- Always inspect the device before use. Do not use if damaged.
- Do not disassemble the device by yourself.

## **Cleaning and Storage:**

### **• Cleaning:**

1. Rinse the device thoroughly to remove all the remaining skin-care product until it is completely clean and then dry it with a lint-free cloth.
2. Leave the device to air dry until it is completely dry with no moisture.

### **• Storage:**

1. Put the USB cable in its correct position.
2. Put the device back into the storage box.
3. When you cover the storage box, make the magnifier in the middle and toward the 3 closing positions, then turn the upper cover gently in anti-clockwise.

### • **Relieving Mode:**

1. Apply your favorite skin care product to your face. This will allow the brush to move in a smoother manner over your skin as it massages your face.
2. Turn on the device and select your desired speed.
3. Massage your face gently with the back side of the silicone Brush. This relaxes your face muscles removing fine lines and wrinkles. It also allows your skin to absorb your skincare product.

### **Important notes:**

- Do not use the device on one part of your face for more than one minute.
- It is advised to use the device two times a day.

### **Charging:**

1. Remove the water resistant cover from the charging port by pulling it outwards.
2. Charge your device by inserting the USB cable into the charging port and plug the other end to a power supply.

### **Note:**

- While the device is charging, the three LED indicators will blink in turn displaying the current charging status.
- When the device is fully charged, all the LED indicators will be on.

## **How to Use:**

### **• Before use:**

1. Make sure the device is fully charged.
2. Always make sure to insert the water resistant cover into the charging port to protect the device from the water.
3. Remove all traces of makeup from your face.
4. Dampen your face with water.

### **• Cleansing Mode:**

1. Turn on the device and select your desired speed.
2. Apply your favorite cleanser on the silicone bristles on the front side of the brush.
3. Press the cleansing brush to your palm until it generates foam. You can also generate the foam directly on your face.
4. Gently move the brush on your face in a circular motion from bottom to top till your face is completely cleansed. This will allow the pores to open and the brush will remove all the dirt and debris effectively.
5. To cleanse your forehead area, start from the center to the sides gently.
6. To cleanse under the eyes, start from the inside to the outside in a gentle motion; however, before starting, it is advised to use the lowest speed.
7. To cleanse the nose, move the brush gently up and down on both sides.
8. Clean your face with cold water to close the pores.

## LED Indicators:

- **Left LED indicator on:** The device will vibrate in the lowest speed.
- **Left and middle LED indicators on:** The device will vibrate faster than the lowest speed.
- **All LED indicators on:** The device will vibrate in the fastest speed.
- **Twinkling of current indicator:** When the battery capacity is lower than 30%, the current speed indicator will blink to remind you to charge. When the battery capacity is lower than 10%, the current speed indicator will blink for 3 seconds then automatically shut off.
- **Three LED indicators blinking in turn:** The device is charging and it will display the current charging status.
- **All LED indicators on:** The device is fully charged.

## Operating Instructions:

1. Press on the power button for two seconds and it will switch on automatically to the low speed level.
2. After switching the device on, press on the power button once to shift between each speed.

**Note:** The device memorizes the speed you were last on before it switches off, so once you switch it back on, it's still on the same speed you last used.

3. Press on the power button for 2 seconds to switch it off.

**Note:** The device is designed to automatically shut off after 2 minutes of consecutive use.

## Specifications:

**Product Name:** Hapilin® Mini Silicone Facial Brush

**Model No.** HA-1769D

**Rated Voltage:** 3.7V

**Rated Power:** 1.5W

**Rated Current:** 0.3A

**Waterproof:** IPX7

**VPM:** 7500RPM

**Power Supply:** Lithium battery (built-in)

**Charging:** USB Charging

**Charging Time:** 2.5hrs

**Operating Time:** 2hrs (60 times)

**Timer:** 2mins

## Product Features:


- **Ultra-soft silicone bristles:** for unclogging pores, getting rid of debris and dirt, and removing black and white heads while being gentle on the skin. It also clears away dead skin and diminishes pore visibility.
- **Unique vibration with three speeds:** it reaches 10000 vibrations per minute for massaging the face, removing fine lines and wrinkles while relaxing the facial muscles and being able to adjust the speed based on your desired results and skin-type.
- **Compact size:** to carry it with you anywhere you go when you travel.
- **LED indicator:** displays the current speed from three different speeds and the current charging status.
- **Rechargeable:** easily rechargeable with its USB cable, provided with the package, which can be plugged into any power supply.
- **Waterproof:** the device is designed to be IPX7 waterproof.



## Hapilin® Mini Silicone Facial Brush

Hapilin® Mini Silicone Facial Brush is designed with ultra-soft silicone bristles that will provide you with a unique cleansing experience like never before. With Hapilin® Mini Silicone Facial Brush, you can enjoy a daily facial cleansing routine to get rid of dirt, debris, oils, and diminish pore visibility. You can also embark on a massaging session to relax your face muscles diminishing fine lines and wrinkles. Most importantly, your travel-friendly facial brush is compact in size allowing you to take it with you wherever you go. This life-saving innovation is waterproof, rechargeable, and comes with a unique vibration where you can ever so easily choose your preference out of three speeds.

1. Silicone Bristles
2. LED Indicator
3. ON/OFF/Speed Button
4. Soft Touching Points
5. Charging Port
6. Water Resistant Cover
7. USB Cable

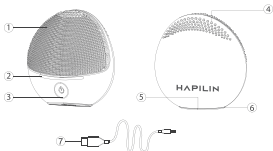

### Travel Storage Box:

1. Hanging Loop
2. Magnifier
3. Upper Cover
4. Magnet
5. USB Cable Position

