

HAPILIN®

MINI SMART STYLER



www.hapilin.com

HAPILIN®


MINI SMART STYLER



www.hapilin.com

Hapilin® Mini Smart Styler

Hapilin® Mini Smart Styler provides you with 3-in-1 versatile trimmer that does all the work that suits all different needs and all changing styles. With its sleek, ergonomic design and rechargeable battery, you will enjoy a fancy comfortable experience from the comfort of your own home.

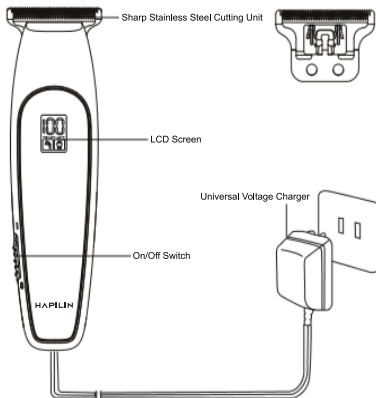

Specifications:

Product Name: Hapilin® Mini Smart Styler

Model No. HAM2S

Rated Voltage: AC 100-240V

Rated Power: 5W

Rated Current: 1000mA

Operating Time: 1.5hrs


Charging Time: 1hr

Accessories:

- 2 Power adapters (double-triple) to be used anywhere in the world
- Universal voltage charger
- A cleaning brush
- 3 Limit combs different in sizes (2-3-4)mm
- A 6ml bottle of lubricating oil

Product Features:

- Designed for beard trimming, face shaving, and manscaping.
- Cordless design to use anytime, anywhere.
- High-quality sharp stainless-steel cutting unit for ideal cutting with corrosion resistance.
- Lithium-ion battery that delivers constant power for perfect hair clipping experience.
- 1+ hours of run time from a single charge.
- Ergonomic design that makes it comfortable to hold, use and reach all edges.
- An LCD screen for displaying battery percentage.
- Easy-to-use 3 interchangeable limit combs that deliver 3 different cutting lengths.
- Made for personal use.



LCD Screen Indicators:

- Battery percentage display (0%-100%).
- When working over 2 hours the oil indicator light on the left side will be on, with add oil remind sound.
- While charging, it will light in red.
- When fully charged, it will light in green.

Operating Instructions:

- 1- Press on the On/Off switch to turn the appliance on.
- 2- The LCD screen will display battery state.
- 3- Upon desired usage, use the appliance with or without limit combs attached.
- 4- After styling, turn off the appliance by switching it off.

Note: Do not use with shaving creams applied or when hair is wet.

Usage Instructions:

- 1- When you trim for the first time, be careful. Do not move the clipper too fast. Make smooth and gentle movements.
- 2- Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.
- 3- For best results, hold the clipper by bringing the blade in contact with the skin and moving the clipper against the flow of the hair.

Note: Hair trimmings may collect inside the limit comb attached when a large amount of hair is cut, so make sure to discard hair trimmings after each use.

Trimming Without Limit Comb Attached:

Use the clipper with no combs for zero hair length to contour the neckline and sideburns.

Note: Be careful when you trim without comb because the cutting element removes every hair it touches.

Trimming With Limit Comb Attached:

- 3 Attached limit combs different in sizes (2-3-4)mm that can be used to extend the cutting length range.
- The larger the size number, the longer the hair remains.

Note:

- The hair length settings are indicated in millimeters, the comb cuts the hair to a length of 2mm to 4mm.
- The settings correspond to the remaining hair length after cutting.

Comb Mounting and Detachment:

Mounting the limit comb:

- 1-Take care not to injure hands, etc.with the blade when detaching or mounting the comb.
- 2-Make sure that the clipper is turned off.
- 3-Align the comb with the cutting unit edge.
- 4-Push slightly forward to mount the comb to the main body until it clicks.



Detaching the comb:


Hold the main body securely, then pull away the comb.

Cutting Unit Removal and Installation:

- 1- Remove the two screws holding the cutting unit to the clippers with a screwdriver, turning the screws counterclockwise.



- 2- Install the replacement cutting unit onto the clippers. Line up the screw holes on the cutting unit with the screw hole openings on the clippers.



- 3- Replace the two screws into the replacement cutting unit and clippers. Tighten the screws on the clippers and cutting unit, turning them clockwise.



Recharging The Appliance:

- 1- Before charging, make sure to switch the appliance off.
- 2- Plug the charger into any convenient electrical outlet at the correct voltage.
- 3- Wait for 60 minutes for clipper to charge.

Note: Slight heating during charging is normal.

Cleaning:

- 1- Use a wet cloth to clean the clipper from the outside after use.
- 2- Use the cleaning brush to remove trimmed hair from the cutting unit.


Warning: Do not use water to wash the clipper, and make sure to keep it away from dampness while operating.



Maintenance:

Hapilin® Mini Smart Styler blades were oiled while manufacturing, however, blades must be oiled after 2 hours of continuous use.

Thus, make sure to oil the blades every few days by placing a few drops of Hapilin® oil on the teeth of the blades to prevent any screeching sound or cutting unit dryness before or after use.



Note: Use only the oil included in the pack as any other oil will slow down the blades.

Safety Matters:

- Do not charge the product under an environment above 40°C or below 0°C.
- Do not leave the device connected to the charger when it is not plugged into an outlet.
- Do not use this appliance near a sink, basin, bathtub, a pool or water of any kind to avoid electrical shock as well as damage to the appliance.
- Always inspect the appliance before use. Do not use if damaged.
- Inspect the appliance power cord regularly. Do not use if damaged.
- Do not leave it unattended when switched on or plugged in.
- This appliance should not be used by persons (including children) who have reduced physical, sensory or mental abilities, or who have a lack of knowledge of use and experience, unless they have been correctly instructed and adequately supervised.
- Keep out of reach of children during and after use.
- Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.
- The clipper cannot be washed. Only the cutting unit and the limit combs can be rinsed under water.
- Keep the adapter dry.
- Only use the charger supplied.
- If the charger is damaged, always have it replaced with one of the original types in order to avoid a hazard.
- Do not use the appliance if the cutting unit or the trimming comb is damaged or broken, as this may cause injury.

Letter of Guarantee:

This appliance is CE and RoHS compliant with the health, safety, and environmental protection standards of the European Economic Area. It also complies with the American Quality and Safety Standards.

It comes with a 14-day money-back guarantee which starts from the day of invoice on the receipt. It can extend to 30 days in the case of a manufacturing defect. It also comes with a 2-year repair warranty.

In the event your appliance stops working within the first 2 years of purchase, please contact us by sending an email to warranty@hapilin.com explaining the problem clearly. We will then be happy to advise you on what to do to ensure your satisfaction.

The warranty applies to manufacturing defects only and does not apply to the following cases:

- Negligence and product misuse.
- Breaking or cracking the appliance.
- Exposing the appliance to water.
- Damage caused by an attempt to repair the appliance by an unauthorized party.

Important:

- This guarantee does not include blades, cables, limit combs, cutting unit, and lubricating oil attached which are consumable parts.
- The money-back guarantee is not applied in the case of personal use of the product.


The appliance has been inspected prior to shipment, so any damage or crack occurring to the outer casing is not covered by this warranty.

As a company, we will be responsible for any costs incurred for repair/replacement of your appliance in the event of a manufacturing fault, in addition to the return shipping costs. However, you will be responsible for shipping costs for the return of the original appliance, if the fault is not a manufacturing one, which must be sent back using a trackable/traceable delivery service, returned in its original box with the original purchase receipt.

Please keep this warranty document with your appliance so that it is handy in the event a problem arises.

ماكينة الحلاقة Mini Smart Styler

ماكينة الحلاقة Mini Smart Styler تعتبر بمثابة مشدّب 3 في 1 لمظاهر مختلفة حتى تناسب جميع احتياجاتك في حلاقة الشارب واللحية، أو تحديدهما، والتحكم في طولهما. وبفضل تصميمها الأنيق والمريح، والبطارية القابلة لإعادة الشحن، ستستمتع بتجربة حلاقة مريحة وممتعة في راحة منزلك.

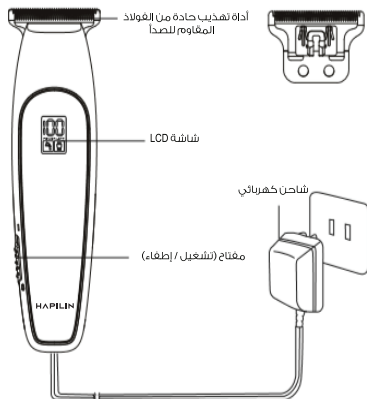

المواصفات:

اسم المنتج: Hapilin® Mini Smart Styler

رقم الموديل: HAM2S

جهد: 100-240 AC فولت

قوة: 5 واط

تيار: 1000 مللي أمبير

زمن العمل: ساعة ونصف


زمن الشحن: ساعة واحدة

الملحقات:

- 2 محول كهربائي (ثنائي - ثلاثي) لاستخدامه بأي مكان في العالم
- شاحن كهربائي
- فرشاة التنظيف
- 3 أمشاط بمقاسات (2-4) مم
- زجاجة زيت تشديم 6 مل

الخصائص:

- مصممة لتشذيب اللحية، حلاقة الوجه، وشعر الجسم.
- مصممة لتعمل لاسلكياً للاستخدام في أي وقت وفي أي مكان.
- أداة تهذيب عالية الجودة من الفولاذ المقاوم للصدأ والتآكل لحلاقة مثالية.
- بطارية ليثيوم أيون توفر طاقة ثابتة وتدوم لوقت أطول لتجربة قص مثالية.
- تشغيل لمدة ساعة ونصف بعد شحنة واحدة.
- تصميم مريح للوصول إلى جميع الشيا، كما يسهل حملها أثناء الاستخدام.
- شاشة LCD حتى يمكنك التحقق من مدى شحن البطارية.
- ثلاثة أمشاط قابلة للتبديل بسهولة والتي توفر لك ثلاثة أطوال تشذيب مختلفة.
- تناسب الاستخدام الشخصي.



مؤشرات الشاشة LCD:

- عرض نسبة شحن البطارية (0% - 100%).
- عند التشغيل لمدة أكثر من ساعتين، سيضيء المؤشر الضوئي للزيت بالجانب الأيسر مع إصدار صوت لتذكيرك بإعادة تزييت الشفرات.
- أثناء الشحن سيضيء المؤشر الضوئي على الشاشة بالضوء الأحمر.
- بمجرد انتهاء عملية الشحن، سيضيء المؤشر الضوئي على الشاشة بالضوء الأخضر.

خطوات التشغيل:

- 1- قم بتشغيل ماكينة الحلاقة بالضغط على مفتاح (تشغيل/إيقاف).
- 2 - ستظهر نسبة شحن البطارية على شاشة LCD.
- 3- يمكنك استخدامها مع أو بدون أمشاط حسب رغبتك.
- 4- بعد الانتهاء، قم بإيقاف التشغيل بالضغط على مفتاح (تشغيل/إيقاف).

تحذير: لا تستخدم الماكينة مع كريمات الحلاقة أو عندما تكون اللحية مبللة.

خطوات الاستخدام:

- 1- ابدأ التشذيب باستخدام أطول مشط ومن ثم قم بتقليل الطول تدريجياً حتى تصل إلى طول الشعر المرغوب.
- 2- قم بتحريك ماكينة الحلاقة في عكس اتجاه نمو الشعر، وتأكد من بقاء الشفرات أو المشط يلامس بشرتك.
- 3- عند التشذيب لأول مرة، كن حذراً ولا تحرك ماكينة الحلاقة بسرعة كبيرة، ولكن مررها بصركات ناعمة ولطيفة على بشرتك.

ملحوظة: من الممكن أن تتجمع بقايا الشعر داخل المشط عند قص كمية كبيرة، لذلك تأكد دائماً من تنظيفها بعد كل استخدام.

التشذيب بدون استخدام الأمشاط:

حلقة الشعر كلياً، أو لتحديد منطقة الرقبة أو السوالف.

ملحوظة: احذر أثناء تشذيب الشعر بدون استخدام المشط لأن أداة التشذيب تزيل كل الشعر التي تلمسه.

التشذيب باستخدام الأمشاط:

- يمكنك الاختيار من بين ثلاثة أمشاط بمقاسات (2-3-4) مم، لتوسيع نطاق اختيارك لأطوال التشذيب.
- كلما كبر حجم المشط، كلما ترك الشعر طويلاً.

لاحظ أن:

- إعدادات طول الشعر بالجهاز يشار إليها بوحدة الملليمتر، والأمشاط تقص الشعر ليتراوح طوله بين 2 مم إلى 4 مم.
- إعدادات طول الشعر تشير إلى طوله المتبقي بعد التشذيب.

طريقة فك وتركيب الأمشاط:

تركيب المشط:

- 1- توى الحذر من تعريض يديك للشفرات أثناء فك أو تركيب الأمشاط.
- 2- تأكد من أن ماكينة الحلاقة غير مشغلة.
- 3- قم بمحاذاة المشط مع حافة الشفرات.
- 4- ادفع المشط قليلاً للأمام لتركيبه حتى يصدر صوت نقرة تدل على تثبيته بشكل صحيح.




فك المشط:

امسك الماكينة بإحكام، ثم قم بسحب المشط للخارج.

طريقة فك وتركيب أداة التشذيب:

1- قم بإزالة المسمارين اللذين يمسكان أداة التشذيب بماكينة الحلاقة بواسطة مفك، عن طريق تدويره عكس اتجاه عقارب الساعة.



2- قم ب تثبيت أداة التشذيب بماكينة الحلاقة بعد تبديلها، عن طريق موازنة الفتحات الموجودة بها مع فتحات المسمارين الموجودة بماكينة الحلاقة.



3- أعد تثبيت المسمارين في مكانهما وأحكام ربطهما بتدويرها في اتجاه عقارب الساعة.

كيفية إعادة الشحن:

- 1- قبل الشحن، تأكد من إيقاف تشغيل الجهاز.
- 2- قم بتوصيل الشاحن بأي منفذ كهربائي مناسب.
- 3- انتظر لمدة 60 دقيقة حتى يتم شحن ماكينة الحلاقة.

ملحوظة: سخونة أو دفء الجهاز أثناء الشحن يعتبر أمر طبيعي.


التنظيف:

- 1- استخدم قطعة قماش مبللة بسيطاً لتنظيف ماكينة الحلاقة بعد الاستخدام.
- 2- قم باستخدام فرشاة التنظيف لتنظيف شفرات أداة التشذيب من الشعر.



تحذير: لا تغسل ماكينة الحلاقة بالماء، وتأكد من إبقائها بعيداً عن الرطوبة أثناء التشغيل.

الصيانة:



تم تزييت شفرات ماكينة الحلاقة Mini Smart Styler أثناء التصنيع، ولكن تأكد من تزييت الشفرات بعد الاستخدام المتواصل لمدة ساعتين، عن طريق وضع قطرات من زيت التشحيم المرفق مع الجهاز على أسنان الشفرات قبل أو بعد الاستخدام لمنع حدوث أي صوت مزعج أو جفاف أداة التشذيب.

ملاحظة: استخدم فقط الزيت المرفق مع الجهاز لأن استخدام أي زيت آخر سيؤثر على صفة الشفرات.

سلامتك تهمنا:

- يُشحن الجهاز في درجات الحرارة المعتدلة، وتجنب شحنه في درجات الحرارة الأكثر من 40 درجة سيلزيوس أو الأقل من 0 درجة سيلزيوس.
- لا تترك الجهاز متصلاً بالشاحن طالما لم يتم التوصيل بالكهرباء.
- لا تستخدم الجهاز بجانب الحوض أو حوض الاستحمام، أو بالقرب من حمام السباحة أو أي نوع من أنواع المياه لتجنب الصدمات الكهربائية وكذلك الأضرار التي قد تلحق بالجهاز.
- افحص ماكينة الحلاقة دائماً قبل كل استخدام، ويجب ألا تستخدم إذا كانت تالفة.
- افحص السلك بانتظام، ويجب ألا يستخدم إذا كان تالف.
- لا تترك الجهاز مشغلاً بدون مراقبة عند تشغيله أو توصيله بالكهرباء.
- لا ينبغي أن يستخدم هذا الجهاز من قبل الأشخاص (بما فيهم الأطفال) الذين لديهم ضعف في قدراتهم البدنية أو الحسية أو العقلية، أو من لديهم نقص في معرفة الاستخدام والخبرة، ما لم يتم الإشراف عليهم وتوجيههم بشكل صحيح.
- يُحفظ الجهاز بعيداً عن متناول الأطفال خلال الاستخدام وبعد الانتهاء.
- قد يؤدي التزييت المفرط إلى حدوث تلف بالمحرك، لأن الزيت قد يتسرب للدخل.
- لا يمكن غسل ماكينة الحلاقة بالماء، ولكن يمكنك شطف أداة التشذيب والأمشاط فقط تحت الماء.
- احتفظ بالشاحن الكهربائي جافاً.
- استخدم فقط الشاحن الكهربائي المرفق مع الجهاز.
- في حالة تلف الشاحن الكهربائي، استبدله بأخر سليم وأصلي لتجنب المخاطر.
- يحذر استخدام الجهاز في حالة تلف أداة التشذيب أو كسرها، لأن ذلك قد يسبب خطراً شديداً.

خطاب الضمان:

الجهاز حاصل على شهادات CE + RoHS ليتوافق مع معايير الصحة والسلامة وحماية البيئة في المنطقة الاقتصادية الأوروبية. كما أنه مصنع طبقاً لمعايير الجودة الأمريكية. ويأتي مع ضمان استرجاع لمدة 14 يوماً وذلك من تاريخ الاستلام المثبت على الفاتورة، وتمتد إلى 30 يوماً في حالة وجود عيب تصنيعي، ويأتي أيضاً مع ضمان صيانة لمدة عامين.

في حالة توقف عمل الجهاز الخاص بك في غضون أول عامين من الشراء، يرجى التواصل معنا عن طريق البريد الإلكتروني warranty@hapilin.com موضحاً المشكلة وسيتم عمل اللازم حرصاً على إرضائكم.

الضمان المقدم يغطي عيوب التصنيع فقط ولا ينطبق على الحالات التالية:

- الإهمال وسوء استخدام المنتج.
- كسر الجهاز.
- تعريض الجهاز للماء.
- الأضرار الناجمة عن محاولة إصلاح الجهاز من قبل طرف غير مصرح به.

تنبيه:

- الضمان لا يشمل الزيت والشفرات والأسلاك والأمشاط وأداة التشذيب لأنها أجزاء استهلاكية.
- ضمان الاسترجاع لا يسري في حالة الاستخدام الشخصي للجهاز.

ينهم الكشف عن الجهاز قبل الشحن ونتيجة لذلك، أي ضرر أو خدش يحدث على الغلاف الخارجي لا يغطيه الضمان.

تتحمل الشركة كافة التكاليف لإصلاح/استبدال الجهاز الخاص بك في حالة حدوث عيب تصنيعي بالإضافة إلى تكاليف الشحن، ويتحمل العميل تكلفة الشحن في حالة عدم وجود أي عيب تصنيعي. يجب إرسال الجهاز في العلبة الأصلية مع وصل الشراء عن طريق شركة الشحن، ويمكن تتبعها.

برجاء الحفاظ على هذا الضمان مع الجهاز الخاص بك بحيث يكون في متناول يديك في حالة مواجهة أي مشكلة.