

# HAPILIN®

PRO HAIR  
CLIPPER



[www.hapilin.com](http://www.hapilin.com)

# HAPILIN®


PRO HAIR  
CLIPPER



[www.hapilin.com](http://www.hapilin.com)

## Hapilin® Pro Hair Clipper

Hapilin® Pro Hair Clipper shaves even the thickest hair with a single pass. With its super quiet motor and 4 limit combs, you will get rid of any hair you put in its path. Whether you want to trim your hair, shave your head, trim your beard, or do some manscaping, the Pro Hair Clipper is convenient and easy to use. Get the sophisticated and smart look in no time.

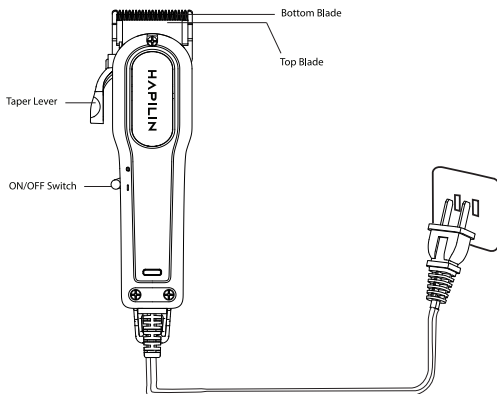

## Specifications:

**Product Name:** Hapilin® Pro Hair Clipper

**Model No.** HA2S

**Rated Voltage:** AC 100-240V

**Rated Power:** 12W

**Rated Current:** 500mA

**Cable Length:** 2.5m

## Accessories:

- 2 Power adapters (double-triple) to be used anywhere in the world.
- A cleaning brush
- 4 Limit Combs different in sizes (3-6-10-13) mm
- A 6 ml bottle of lubricating oil

## Product Features:

- High-quality sharp stainless-steel cutting unit for ideal cutting with corrosion resistance.
- Fast cutting for hair, beard, and manscaping.
- Ultimate performance with less noise.
- 4 High-tech combs for different lengths that are easily interchangeable.
- Powerful Performance: Cuts even the thickest of hair.
- Low-friction engineering: Optimized to make cuts that last.
- Made for professional use.



3mm



6mm



10mm



13mm

## Operating Instructions:

- 1- Plug the clipper into an electrical outlet.
- 2- Switch on the clipper using the On/Off switch.
- 3- Upon desired usage, use the clipper with one of the attached limit combs or without.
- 4- Adjust the length setting switch to the desired length setting.
- 5- After styling, turn off the appliance by switching it off.

**Note:** Do not use with shaving creams applied or when hair is wet.

## Usage Instructions:

- 1- Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.
- 2- For best results, hold the clipper by bringing the blade in contact with the skin and moving the clipper against the flow of the hair.
- 3- When you trim for the first time, be careful. Do not move the clipper too fast. Make smooth and gentle movements.

**Note:** Hair trimmings may collect inside the attachment when a large volume of beard is cut, so make sure to discard hair trimmings after each use.

### Trimming Without Limit Comb Attached:

Use the clipper with no combs for zero hair length to contour the neckline and sideburns.

**Note:** Be careful when you trim without comb because the cutting element removes every hair it touches.

### Trimming With Limit Comb Attached:


- 4 Attached combs different in sizes (3-6-10-13)mm that can be used to extend the cutting length range.
- The larger the size number, the longer the hair that will remain on your face or head.

**Note:** The size of the comb corresponds to the remaining hair length after cutting. It ranges from 3mm to 13mm.

### Taper Lever:

Used for more range of length within each guard.

- Raise the taper lever: for the minimum cutting length.
- Lower the taper lever: for the maximum cutting length.

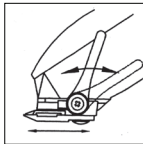

## Comb Mounting and Detachment:

### Mounting the limit comb:


- Make sure that the clipper is turned off.
- Align the comb with the cutting unit edge.
- Push slightly forward to mount the comb to the main body until it clicks.

### Detaching the limit comb:

Hold the main body securely, then pull away the comb.

## Cutting Unit Removal and Installation:


- 1- Remove the two screws holding the cutting unit to the clippers with a screwdriver, turning the screws counterclockwise.



- 2- Install the replacement cutting unit onto the clipper. Line up the screw holes on the cutting unit with the screw hole openings on the clipper.



- 3- Replace the two screws into the replacement cutting unit and clipper. Tighten the screws on the clipper and cutting unit, turning them clockwise.



- 4- Make sure that the end of top blade teeth should be approximately 0.5-1.0mm back from the bottom blade.


## Cleaning:

- 1- Use a wet cloth to clean the clipper from the outside after use.
- 2- Use the cleaning brush to remove trimmed hair from the cutting unit.

**Warning:** Do not use water to wash the clipper, and make sure to keep it away from dampness while operating.

## Maintenance:

Hapilin® Pro Hair Clipper blades were oiled while manufacturing, however, blades must be oiled after 2 hours of continuous use. Thus, make sure to oil the blades every few cuts by placing a few drops of Hapilin® oil on the teeth of the blades to prevent any screeching sound or cutting unit dryness before or after use.



**Note:** Use only the oil included in the pack as any other oil will slow down the blades.

## Safety Matters:

- Do not use this appliance near a sink, basin, bathtub, a pool or water of any kind to avoid electrical shock as well as damage to the appliance.
- Always inspect the appliance before use. Do not use if damaged.
- Inspect the appliance power cord regularly. Do not use if damaged.
- Do not leave it unattended when switched on or plugged in.
- This appliance should not be used by persons (including children) who have reduced physical, sensory or mental abilities, or who have a lack of knowledge of use and experience, unless they have been correctly instructed and adequately supervised.
- Keep out of reach of children during and after use.
- Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.
- The clipper cannot be washed. Only the cutting unit and the limit combs can be rinsed under water.
- Do not use the appliance if the cutting unit or the trimming comb is damaged or broken, as this may cause injury.

## Letter of Guarantee:

This appliance is CE and RoHS compliant with the health, safety, and environmental protection standards of the European Economic Area. It also complies with the American Quality and Safety Standards.

It comes with a 14-day money-back guarantee which starts from the day of invoice on the receipt. It can extend to 30 days in the case of a manufacturing defect. It also comes with a 2-year repair warranty.

In the event your appliance stops working within the first 2 years of purchase, please contact us by sending an email to [warranty@hapilin.com](mailto:warranty@hapilin.com) explaining the problem clearly. We will then be happy to advise you on what to do to ensure your satisfaction.

**The warranty applies to manufacturing defects only and does not apply to the following cases:**

- Negligence and product misuse.
- Breaking or cracking the appliance.
- Exposing the appliance to water.
- Damage caused by an attempt to repair the appliance by an unauthorized party.

### **Important:**

- This guarantee does not include blades, cables, limit combs, cutting unit, and lubricating oil attached which are consumable parts.
- The money-back guarantee is not applied in the case of personal use of the product.


The appliance has been inspected prior to shipment, so any damage or crack occurring to the outer casing is not covered by this warranty.

As a company, we will be responsible for any costs incurred for repair/replacement of your appliance in the event of a manufacturing fault, in addition to the return shipping costs. However, you will be responsible for shipping costs for the return of the original appliance, if the fault is not a manufacturing one, which must be sent back using a trackable/traceable delivery service, returned in its original box with the original purchase receipt.

**Please keep this warranty document with your appliance so that it is handy in the event a problem arises.**

## ماكينة الحلاقة Pro Hair Clipper

تقوم ماكينة الحلاقة الاحترافية Pro Hair Clipper بتشذيب الشعر حتى السميك منه بتمريزة واحدة فقط. بفضل محركها فائق الهدوء وأمشاط التشذيب الأربعة، لتتخلص من أي شعر قد تضعه في طريقها، مهما كانت حاجتك؛ حلق أو تشذيب شعرك، أو لحينك، أو حتى إزالة شعر الجسم، فهو بمثابة جهاز مريح وسهل ومتعدد الاستخدام وسيمنحك أفضل النتائج في أقل وقت.

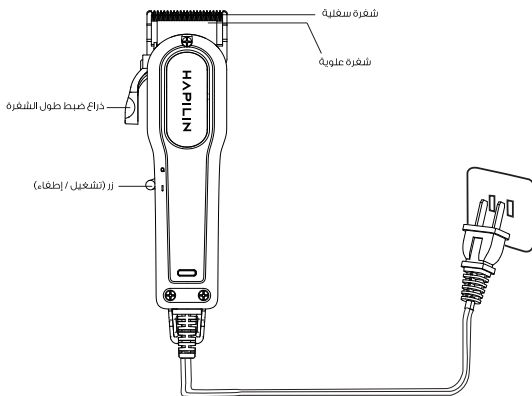

## المواصفات:

**اسم المنتج:** Hapilin® Pro Hair Clipper

**رقم الموديل:** HA2S

**جهد:** AC 240-100 فولت

**قوة:** 12 وات

**تيار:** 500 مللي أمبير

**طول السلك:** 2.5 متر



## الملحقات:

- 2. محول كهربائي (ثنائي - ثلاثي) لاستخدامه بأي مكان في العالم
- 3. فرشاة للتنظيف (3-6-10-13)
- 4. أمشاط تشذيب بمقاسات مختلفة
- 6 مل. زجاجة زيت تشذيب

## الخصائص:

- أداة تهذيب عالية الجودة من الفولاذ المقاوم للصدأ والتآكل لحلاقة مثالية.
- تشذيب سريع لشعر الرأس، واللحية، وشعر الجسم.
- أداء فائق مع مستوى ضيق منخفض.
- أربعة أمشاط قابلة للتبديل بسهولة، توفر لك أربعة أطوال تشذيب مختلفة.
- أداء فعال يزيل حتى الشعر السميك.
- قوة احتكاك منخفضة تتيح لك مظهر دائم بدقة وفعالية.
- تناسب الاستخدام الاحترافي.



3 مم



6 مم



10 مم



13 مم

## خطوات التشغيل:

- 1- قم بتوصيل ماكينة الحلاقة بمقيس الكهرباء.
- 2- قم بتشغيلها بالضغط على مفتاح (تشغيل/إيقاف).
- 3- يمكنك استخدامها مع أو بدون أمشاط حسب رغبتك.
- 4- قم بضبط طول الشفرة الذي تشده من خلال ذراع ضبط الشفرة.
- 5- عد الانتهاء، قم بإيقاف التشغيل بالضغط على مفتاح (تشغيل/إيقاف).

**ملحوظة:** لا تستخدم الماكينة عند وضع كريمات الحلاقة أو عندما يكون الشعر مبللاً.

## خطوات الاستخدام:

- 1- ابدأ التشذيب باستخدام أطول مشط ومن ثم قم بتقليل الطول تدريجيًا حتى تصل إلى طول الشعر المرغوب.
- 2- قم بتحريك ماكينة الحلاقة في عكس اتجاه نمو الشعر، وتأكد من بقاء الشفرات أو المشط يلامس بشرتك.
- 3- عند التشذيب لأول مرة، كن حذرًا ولا تحرك ماكينة الحلاقة بسرعة كبيرة، ولكن مررها بصرعات ناعمة ولطيفة على بشرتك.

**ملحوظة:** من الممكن أن تتجمع بقايا الشعر داخل المشط عند قص كمية كبيرة، لذلك تأكد دائمًا من تنظيفها بعد كل استخدام.

## التشذيب بدون استخدام الأمشاط:

حلقة الشعر كلياً، أو لتحديد منطقة الرقبة أو السوالف.

**ملحوظة:** احذر أثناء تشذيب الشعر بدون استخدام المشط لأن أداة التشذيب تزيل كل الشعر التي تلمسه.

## التشذيب باستخدام الأمشاط:

- يمكنك الاختيار من بين أربعة أمشاط بمقاسات (3-6-10-13) مم لتوسيع نطاق اختياراتك لأطوال التشذيب.
- كلما كبر حجم المشط، كلما ترك شعر الوجه أو الرأس طويلاً.


## لاحظ أن:

طول المشط يشير إلى طول الشعر المتبقي بعد التشذيب ليتراوح طوله بين 3 مم إلى 13 مم.

## ذراع ضبط طول الشفرة:

لیمنحك حرية الاختيار من الأطوال لكل شفرة بدقة حيث أن:

- رفع الذراع لأعلى: لأقل طول يمكنك قصه.
- خفض الذراع لأسفل: لأكبر طول يمكنك قصه.

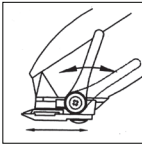

## طريقة فك وتركيب الأمشاط:

### تركيب المشط:

- تأكد من أن ماكينة الحلاقة غير مشغلة.
- قم بمحاذاة المشط مع حافة الشفرات.
- ادفع المشط قليلاً للأمام لتركيبه حتى يصدر صوت نقرة تدل على تثبيته بشكل صحيح.

### فك المشط:



امسك الماكينة بإحكام، ثم قم بسحب المشط للخارج.

## طريقة فك وتركيب أداة التشذيب:

1- قم بإزالة المسمارين اللذين يمسكان أداة التشذيب بماكينة الحلاقة بواسطة مفك وتدويره عكس اتجاه عقارب الساعة.

2- قم بتثبيت أداة التشذيب اليدوية بماكينة الحلاقة، عن طريق موازنة الفتحات الموجودة بها مع فتحات المسمارين الموجودة بماكينة الحلاقة.


3- أعد تثبيت المسمارين في مكانهما وأحكام ربطهما بتدويرهما في اتجاه عقارب الساعة.



4- تأكد من أن نهاية أسنان الشفرة العلوية تبعد حوالي 0.5 إلى 1.0 ملليمتر تقريباً من نهاية الشفرة السفلية.

## التنظيف:

- 1- استخدم قطعة قماش مبللة بسيطاً لتنظيف ماكينة الحلاقة بعد الاستخدام.
  - 2- قم باستخدام فرشاة التنظيف لتنظيف شفرات أداة التشذيب من الشعر.
- تحذير: لا تغسل ماكينة الحلاقة بالماء، وتأكد من إبقائها بعيداً عن الرطوبة أثناء التشغيل.



## الصيانة:

تم تزييت شفرات ماكينة الطلاقة Pro Hair Clipper أثناء التصنيع، ولكن تأكد من تزييت الشفرات بعد الاستخدام المتواصل لمدة ساعتين، عن طريق وضع بضع قطرات من زيت التشحيم المرفق مع الجهاز على أسنان الشفرات قبل أو بعد الاستخدام لمنع حدوث أي صوت مزعج أو جفاف أداة التشذيب.

**ملاحظة:** استخدم فقط الزيت المرفق مع الجهاز لأن استخدام أي زيت آخر سيؤثر على حدة الشفرات.

## سلامتك تهمنا:

- لا تستخدم الجهاز بجانب الحوض أو حوض الاستحمام، أو بالقرب من حمام السباحة أو أي نوع من أنواع المياه لتجنب الصدمات الكهربائية وكذلك الأضرار التي قد تلحق بالجهاز.
- افحص ماكينة الحلاقة دائماً قبل كل استخدام، ويجب ألا تستخدم إذا كانت تالفة.
- افحص السلك بانتظام، ويجب ألا يستخدم إذا كان تالف.
- لا تترك الجهاز مشغلاً بدون مراقبة عند تشغيله أو توصيله بالكهرباء.
- لا ينبغي أن يستخدم هذا الجهاز من قبل الأشخاص (بما فيهم الأطفال) الذين لديهم ضعف في قدراتهم البدنية أو الحسية أو العقلية، أو من لديهم نقص في معرفة الاستخدام والخبرة، ما لم يتم الإشراف عليهم وتوجيههم بشكل صحيح.
- يحفظ الجهاز بعيداً عن متناول الأطفال خلال الاستخدام وبعد الانتهاء.
- قد يؤدي التزييت المفرط إلى حدوث تلف بالمحرك، لأن الزيت قد يتسرب للداخل.
- لا يمكن غسل ماكينة الحلاقة بالماء، ولكن يمكنك شطف أداة التشذيب والأمشاط فقط تحت الماء.
- يحذر استخدام الجهاز في حالة تلف أداة التشذيب أو كسرها، لأن ذلك قد يسبب خطراً شديداً.

## خطاب الضمان:

الجهاز حاصل على شهادات CE ، RoHS ليتوافق مع معايير الصحة والسلامة وحماية البيئة في المنطقة الاقتصادية الأوروبية، كما أنه مصنع طبقاً لمعايير الجودة والسلامة الأمريكية. ويأتي مع ضمان استرجاع لمدة 14 يوماً وذلك من تاريخ الاستلام المثبت على الفاتورة، وتمتد إلى 30 يوماً في حالة وجود عيب تصنيع، ويأتي أيضاً مع ضمان صيانة لمدة عامين.

في حالة توقف عمل الجهاز الخاص بك في غضون أول عامين من الشراء، يرجى التواصل معنا عن طريق البريد الإلكتروني [warranty@hapilin.com](mailto:warranty@hapilin.com) موضحاً المشكلة وسيتم عمل اللازم حرصاً على إرضائك.

### الضمان المقدم يغطي عيوب التصنيع فقط ولا ينطبق على الحالات التالية:

- الإهمال وسوء استخدام المنتج.
- كسر الجهاز.
- تعريض الجهاز للماء.
- الأضرار الناجمة عن محاولة إصلاح الجهاز من قبل طرف غير مصرح به.

### تنبيه:

• الضمان لا يشمل الزيت والشفرات والأسلاك والأمشاط وأداة التشذيب لأنها أجزاء استهلاكية.

• ضمان الاسترجاع لا يسري في حالة الاستخدام الشخصي للجهاز.

يتم الكشف عن الجهاز قبل الشحن ونتيجة لذلك، أي ضرر أو خدش يحدث على الغلاف الخارجي لا يغطيه الضمان.

تتحمل الشركة كافة التكاليف لإصلاح/استبدال الجهاز الخاص بك في حالة حدوث عيب تصنيع بالإضافة إلى تكاليف الشحن، ويتحمل العميل تكلفة الشحن في حالة عدم وجود أي عيب تصنيع.

يجب إرسال الجهاز في العلبة الأصلية مع وصل الشراء عن طريق شركة الشحن، ويمكن تتبعها.

**برجاء الحفاظ على هذا الضمان مع الجهاز الخاص بك بحيث يكون في متناول يديك في حالة مواجهة أي مشكلة.**