

HAPILIN[®]

SMART PRO
CLIPPER



www.hapilin.com

HAPILIN[®]


SMART PRO
CLIPPER



www.hapilin.com

Hapilin® Smart Pro Clipper:

Hapilin® Smart Pro Clipper with its high performance and low-noise, gives you the perfect in-style cut. It comes with an innovative LCD screen, unique functions made for professional and personal use, and fast cutting for hair, beard, and manscaping. With its 4 High-tech combs and high-quality stainless-steel cutting unit, you will get the ideal cut time after time with no disappointment!

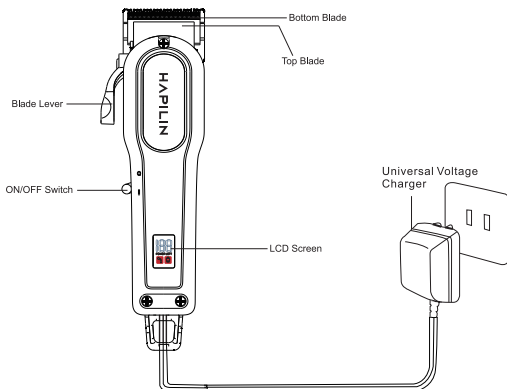

Specifications:

Product Name: Hapilin® Smart Pro Clipper

Model No. HA3

Rated Voltage: AC 100-240V

Rated Power: 5W

Rated Current: 1000mA

Operating Time: 3hrs

Charging Time: 3hrs

Accessories:

- 2 Power adapters (double-triple) to be used anywhere in the world
- Universal Voltage Charger
- Cleaning brush
- 4 Limit combs different in size (3-6-10-13) mm
- 6ml Bottle of lubricating oil

Product Features:

- High-quality sharp stainless-steel cutting unit for ideal cutting with corrosion resistance.
- Fast cutting for hair, beard, and manscaping.
- Ultimate performance with less noise.
- An LCD screen for displaying speeds and battery percentage
- 4 High-tech combs for different lengths that are easily interchangeable.
- Powerful Performance: Cuts even the thickest of hair.
- Low-friction engineering: Optimized to make cuts that last.
- Cordless design to use anytime, anywhere.
- Lithium-ion battery that delivers constant power for perfect hair clipping experience.
- Made for professional use.



13 mm



10 mm



6 mm



3 mm

LCD Screen Indicators:

- Battery percentage display (1%-100%).
- When working over 2hrs the oil indicator light on the left side will be on with add oil remind sound.
- Right side charging light will flash when the power is less than 10%. Please charge immediately. (Please turn off the machine before charging)

Operating Instructions:

- 1- Press the On/Off switch to turn the appliance on.
- 2-The LCD screen will display the battery state.
- 3- Upon the desired results, use the appliance with or without limit combs attached.
- 4- Adjust the taper level to the desired length setting.
- 5 - After styling, turn off the appliance by switching it off.

Note: Do not use with shaving creams or when hair is wet.

Usage Instructions:

- 1- Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.
- 2- For best results, hold the clipper by bringing the blade in contact with the skin and moving the clipper against the flow of the hair.
- 3- When you trim for the first time, be careful. Do not move the clipper too fast. Make smooth and gentle movements.

Note: Hair trimmings may accumulate inside the limit comb attached when a large amount of hair is cut, so make sure to discard hair trimmings after each use.

Trimming without Comb:

Use the clipper without the trimming comb to clip hair close to the skin (0.5 mm) or to contour the neckline and sideburns.

Note: Be careful when you trim without comb because the cutting element removes every hair it touches.

Trimming with Comb:

- Attach the desired comb onto the appliance (3-6-10-13) mm.
- The bigger the comb length, the longer the remaining hair after cutting.

Note: The size of the comb corresponds to the remaining hair length after cutting. It ranges from 3mm to 13mm

Taper Lever:

For more range of length within each guard:

- Raise the taper lever: minimum cutting length.
- Lower the taper lever: maximum cutting length.

Comb Mounting and Detachment:

Mounting the limit comb:

- 1- Make sure that the clipper is turned off.
- 2- Align the comb with the cutting unit edge.
- 3- Push slightly forward to mount the comb to the main body until it clicks.

Detaching the comb:

Hold the main body securely, then pull the comb away.

Cutting Unit Removal and Installation:

- 1- Remove the two screws holding the cutting unit to the clippers with a screwdriver, turning the screws counterclockwise.
- 2- Install the replacement cutting unit onto the clipper. Line up the screw holes on the cutting unit with the screw hole openings on the clipper.
- 3- Replace the two screws into the replacement cutting unit and clipper. Tighten the screws on the clipper and cutting unit, turning them clockwise.
- 4- Make sure that the end of top blade teeth should be approximately 0.5-1.0mm back from the bottom blade.

Recharging the Appliance:

- 1- Before charging, make sure to switch the appliance off.
- 2- Plug the charger into any convenient electrical outlet.
- 3- Wait for 3 hours for the clipper to charge.

Note: Slight heating during charging is normal.

Cleaning:

- 1- Use a wet cloth to clean the clipper from the outside after use.
- 2- Use the cleaning brush to remove trimmed hair from the cutting unit.

Warning: Do not use water to wash the clipper, and make sure to keep it away from dampness while operating.

Maintenance:

Hapilin® Smart Pro Clipper blades were oiled while manufacturing, however, it must be oiled after 2 hours of continuous use.

Thus, make sure to oil the blades every few cuts by placing a few drops of Hapilin® oil on the teeth of the blades to prevent any screeching sound or cutting unit dryness before or after use.



Note: Use only the oil included in the pack as any other oil will slow down the blades.

Safety Matters:

- Do not charge the product under an environment above 40°C or below 0°C.
- Do not leave the device connected to the charger when it is not plugged into an outlet.
- Do not use this appliance near a sink, basin, bathtub, a pool, or water of any kind to avoid electrical shock as well as damage to the appliance.
- Always inspect the appliance before use. Do not use if damaged.
- Inspect the appliance power cord regularly. Do not use if damaged.
- Do not leave it unattended when switched on or plugged in.
- This appliance should not be used by persons (including children) who have reduced physical, sensory or mental abilities, or who have a lack of knowledge of use and experience, unless they have been correctly instructed and adequately supervised.
- Keep out of reach of children during and after use.
- Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.
- The clipper cannot be washed. Only the cutting unit and the limit combs can be rinsed under the tap.
- Keep the adapter dry.
- Only use the charger supplied.
- If the charger is damaged, always have it replaced with one of the original types in order to avoid a hazard.
- Do not use the appliance if the cutting unit or the trimming comb is damaged or broken, as this may cause injury.

Letter of Guarantee:

This appliance is CE and RoHS compliant with the health, safety, and environmental protection standards of the European Economic Area. It also complies with the American Quality and Safety Standards. It comes with a 14-day money-back guarantee which starts from the day of invoice on the receipt. It can extend to 30 days in the case of a manufacturing defect. It also comes with a 2-year repair warranty.

In the event your appliance stops working within the first 2 years of purchase, please contact us by sending an email to warranty@hapilin.com explaining the problem clearly. We will then be happy to advise you on what to do to ensure your satisfaction.

The warranty applies to manufacturing defects only and does not apply to the following cases:

- Negligence and product misuse.
- Breaking or cracking the appliance.
- Exposing the appliance to water.
- Damage caused by an attempt to repair the appliance by an unauthorized party.

Important:

- This guarantee does not include blades, cables, limit combs, cutting unit, and lubricating oil which are consumable parts.
- The money-back guarantee is not applied in the case of personal use of the product.


The appliance has been inspected prior to shipment, so any damage or crack occurring to the outer casing is not covered by this warranty.

As a company, we will be responsible for any costs incurred for repair/replacement of your appliance in the event of a manufacturing fault, in addition to the return shipping costs. However, you will be responsible for shipping costs for the return of the original appliance, if the fault is not a manufacturing one, which must be sent back using a trackable/traceable delivery service, returned in its original box with the original purchase receipt.

Please keep this warranty document with your appliance so that it is handy in the event a problem arises.

Hapilin® Smart Pro Clipper

ماكينة الحلاقة الاحترافية Smart Pro Clipper ذات الأداء العالي، ومستوى الضوضاء المنخفض، تتميز بفعالية ومثالية تزيل حتى الشعر السميك والعنيد لتمنحك فضاء مثالية. وتتميز أيضاً بشاشة LCD مبتكرة، ووظائف فريدة من نوعها لتتناسب الاستخدام الشخصي والاحترافي، وذلك من خلال التشذيب السريع للشعر واللحية وشعر الجسم، ويفضل أداة التشذيب الحادة المقاومة للصدأ وعالية الجودة ويفضل أيضاً أمشاطها الأربعة المصنعة بتقنية عالية، فإنك بالتأكيد ستستمتع بقضاء وقت حلاقة مثالي يفوق توقعاتك!

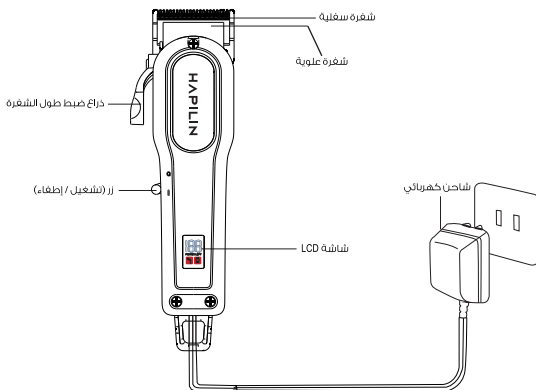

المواصفات:

اسم المنتج: Hapilin® Smart Pro Clipper

رقم الموديل: HA3

جهد: 220-110 AC فولت

قوة: 5 واط

تيار: 1000 مللي أمبير

مدة التشغيل: 3 ساعات


مدة الشحن: 3 ساعات

الملحقات:

- 2. محول كهربائي (ثنائي - ثلاثي) لاستخدامه بأي مكان في العالم
- شاحن كهربائي
- فرشاة التنظيف
- 4. أمشاط تشذيب بمقاسات (3-6-10-13) مم
- زجاجة زيت تشذيب 6 مل

الخصائص:

- أداة تهذيب عالية الجودة من الفولاذ المقاوم للصدأ والتآكل لحلاقة مثالية.
- تشذيب سريع لشعر الرأس، واللحية، وشعر الجسم.
- أداء فائق مع مستوى ضيق منخفض.
- شاشة LCD حتى يمكنك التحقق من مدى شحن البطارية.
- أربعة أمشاط قابلة للتبديل بسهولة، توفر لك أربعة أطوال تشذيب مختلفة.
- أداء فعال يزيل حتى الشعر السميك.
- قوة احتكاك منخفضة تتيح لك مظهر دائم بدقة وفعالية.
- مصمم ليعمل لاسلكياً للاستخدام في أي وقت وفي أي مكان.
- بطارية ليثيوم أيون توفر طاقة ثابتة وتدوم لوقت أطول لتجربة قص مثالية.
- تناسب الاستخدام الاحترافي.



مؤشرات الشاشة LCD:

- عرض نسبة شحن البطارية (1% - 100%).
- عند التشغيل لمدة أكثر من ساعتين، سيضيء المؤشر الصوتي للزيت بالجانب الأيسر مع إصدار صوت لتذكيرك بإعادة تزييت الشفرات.
- سيومض المؤشر الصوتي لشحن البطارية بالجانب الأيمن عندما تكون أقل من 10%، ويجب الشحن على الفور. (يرجى إيقاف تشغيل الجهاز قبل بدء الشحن)

خطوات التشغيل:

- 1- قم بتشغيل ماكينة الحلاقة بالضغط على مفتاح (تشغيل/إيقاف).
- 2- ستظهر نسبة شحن البطارية على شاشة LCD.
- 3- يمكنك استخدامها مع أو بدون أمشاط حسب رغبتك.
- 4- قم بضغط طول الشفرة الذي تنشده من خلال ذراع ضبط الشفرة.
- 5- بعد الانتهاء، قم بإيقاف التشغيل بالضغط على مفتاح (تشغيل/إيقاف).

تحذير: لا تستخدم الماكينة مع كريمات الحلاقة أو عندما يكون الشعر مبلل.

خطوات الاستخدام:

- 1- ابدأ التشذيب باستخدام أطول مشط ومن ثم قم بتقليل الطول تدريجيًا حتى تصل إلى طول الشعر المرغوب.
- 2- قم بتحريك ماكينة الحلاقة في عكس اتجاه نمو الشعر، وتأكد من بقاء الشفرات أو المشط يلامس بشرتك.
- 3- عند التشذيب لأول مرة، كن حذرًا ولا تحرك ماكينة الحلاقة بسرعة كبيرة، ولكن مررها بحركات ناعمة ولطيفة على بشرتك.

ملحوظة: من الممكن أن تتجمع بقايا الشعر داخل المشط عند قص كمية كبيرة، لذلك تأكد دائماً من تنظيفها بعد كل استخدام.

التشذيب بدون استخدام الأمشاط:

لحلاقة الشعر كلياً، أو لتحديد منطقة الرقبة أو السوالف.

ملحوظة: أثناء تشذيب الشعر بدون استخدام المشط تقوم أداة التشذيب بإزالة كل الشعر التي تلمسه.

التشذيب باستخدام الأمشاط:

- يمكنك الاختيار من بين أربعة أمشاط بمقاسات (3-6-10-13) مم لتوسيع نطاق اختياراتك لأطوال التشذيب.
- كلما كبر حجم المشط، كلما ترك شعر الوجه أو الرأس طويلاً.

لاحظ أن:

طول المشط يشير إلى طول الشعر المتبقي بعد التشذيب ليتراوح طوله بين 3 مم إلى 13 مم.

ذراع ضبط طول الشفرة:

لإمتح حرية الاختيار من الأطوال لكل شفرة بدقة حيث أن:

- رفع الذراع لأعلى: لأقل طول يمكنك قصه.
- خفض الذراع لأسفل: لأكثر طول يمكنك قصه.

طريقة فك وتركيب الأمشاط:

تركيب المشط:

- 1- تأكد من أن ماكينة الحلاقة غير مشغلة.
- 2- قم بمحاذاة المشط مع حافة الشفرات.
- 3- ادفع المشط قليلاً للأمام لتركيبه حتى يصدر صوت نقرة تدل على تثبيته بشكل صحيح.

فك المشط:

امسك الماكينة بإحكام، ثم قم بسحب المشط للخارج.

طريقة فك وتركيب أداة التشذيب:

- 1- قم بإزالة المسمارين اللذين يمسكان أداة التشذيب بماكينة الحلاقة بواسطة مفك بتدويره عكس اتجاه عقارب الساعة.
- 2- قم بتثبيت أداة التشذيب البديلة بماكينة الحلاقة، عن طريق موازنة الفتحات الموجودة بها مع فتحات المسمارين الموجودة بماكينة الحلاقة.
- 3- أعد تثبيت المسمارين في مكانهما وأحكام ربطهما بتدويرهما في اتجاه عقارب الساعة.
- 4- تأكد من أن نهاية أسنان الشفرة العلوية تبعد حوالي 0.5 إلى 1.0 ملليمتر تقريباً من نهاية الشفرة السفلية.

كيفية إعادة الشحن:

- 1- قبل الشحن، تأكد من إيقاف تشغيل الجهاز.
- 2- قم بتوصيل الشاحن بأي منفذ كهربائي مناسب.
- 3- انتظر حتى 3 ساعات وتأكد من شحن البطارية بالكامل.

ملحوظة: سخونة أو دفء الجهاز أثناء الشحن يعتبر أمر طبيعي.

التنظيف:

- 1- استخدم قطعة قماش مبللة بسيطاً لتنظيف ماكينة الحلاقة بعد الاستخدام.
 - 2- قم باستخدام فرشاة التنظيف لتنظيف شفرات أداة التشذيب من الشعر.
- تحذير:** لا تغسل ماكينة الحلاقة بالماء، وتأكد من إبقائها بعيداً عن الرطوبة أثناء التشغيل.

الصيانة:



تم تزييت شفرات ماكينة الحلاقة Smart Pro Clipper أثناء التصنيع، ولكن تأكد من تزييت الشفرات من وقت لآخر بعد الاستخدام، عن طريق وضع بضع قطرات من زيت التشحيم المرفق مع الجهاز على أسنان الشفرات قبل أو بعد الاستخدام لمنع حدوث أي صوت مزعج أو جفاف أداة التشذيب.

ملاحظة: استخدم فقط الزيت المرفق مع الجهاز لأن استخدام أي زيت آخر سيؤثر على حدة الشفرات.

سلامتك تهمنا:

- يُشحن الجهاز في درجات الحرارة المعتدلة، وتجنب شحنه في درجات الحرارة الأكثر من 40 درجة سيلزيوس أو الأقل من 0 درجة سيلزيوس.
- لا تترك الجهاز متصلاً بالشاحن طالما لم يتم التوصليل بالكهرباء.
- لا تستخدم الجهاز بجانب الحوض أو حوض الاستحمام، أو بالقرب من حمام السباحة أو أي نوع من أنواع المياه لتجنب الصدمات الكهربائية وكذلك الأضرار التي قد تلحق بالجهاز.
- افحص ماكينة الحلاقة دائماً قبل كل استخدام، ويجب ألا تستخدم إذا كانت تالفة.
- افحص السلك بانتظام، ويجب ألا تستخدم إذا كان تالف.
- لا تترك الجهاز مشغلاً بدون مراقبة عند تشغيله أو توصيله بالكهرباء.
- لا ينبغي أن يستخدم هذا الجهاز من قبل الأشخاص (بما فيهم الأطفال) الذين لديهم ضعف في قدراتهم البديهية أو الحسية أو العقلية، أو من لديهم نقص في معرفة الاستخدام والخبرة، ما لم يتم الإشراف عليهم وتوجيههم بشكل صحيح.
- يُحفظ الجهاز بعيداً عن متناول الأطفال خلال الاستخدام وبعد الانتهاء.
- قد يؤدي التزييت المفرط إلى حدوث تلف بالمحرك، لأن الزيت قد يتسرب للداخل.
- لا يمكن غسل ماكينة الحلاقة بالماء، ولكن يمكنك شطف أداة التشذيب والأمشاط فقط تحت الماء.
- احتفظ بالشاحن الكهربائي جافاً.
- استخدم فقط الشاحن الكهربائي المرفق مع الجهاز.
- في حالة تلف الشاحن الكهربائي، استبدله بأخر سليم وأصلي لتجنب المخاطر.
- يحذر استخدام الجهاز في حالة تلف أداة التشذيب أو كسرها، لأن ذلك قد يسبب خطراً شديداً.

خطاب الضمان:

الجهاز حاصل على شهادات CE ، RoHS ليتوافق مع معايير الصحة والسلامة وحماية البيئة في المنطقة الاقتصادية الأوروبية. كما أنه مصمم طبقاً لمعايير الجودة والسلامة الأمريكية. ويأتي مع ضمان استرجاع لمدة 14 يوماً وذلك من تاريخ الاستلام المُثبت على الفاتورة، وتمتد إلى 30 يوماً في حالة وجود عيب تصنيع، ويأتي أيضاً مع ضمان صيانة لمدة عامين.

في حالة توقف عمل الجهاز الخاص بك في غضون أول عامين من الشراء، يرجى التواصل معنا عن طريق البريد الإلكتروني warranty@hapilin.com موضحاً المشكلة و سيتم عمل اللازم حرصاً على إرضائك.

الضمان المقدم يغطي عيوب التصنيع فقط ولا ينطبق على الحالات التالية:

- الإهمال وسوء استخدام المنتج.
- كسر الجهاز.
- تعريض الجهاز للماء.
- الأضرار الناجمة عن محاولة إصلاح الجهاز من قبل طرف غير مصرح به.

تنبيه:

- الضمان لا يشمل الزيت والشفرات والأسلاك والأمشاط وأداة التشذيب لأنها أجزاء استهلاكية.
- ضمان الاسترجاع لا يسري في حالة الاستخدام الشخصي للجهاز.

يتم الكشف عن الجهاز قبل الشحن ونتيجة لذلك، أي ضرر أو خدش يحدث على الغلاف الخارجي لا يغطيه الضمان.

تتحمل الشركة كافة التكاليف لإصلاح/استبدال الجهاز الخاص بك في حالة حدوث عيب تصنيع بالإضافة إلى تكاليف الشحن، ويتحمل العميل تكلفة الشحن في حالة عدم وجود أي عيب تصنيع.

يجب إرسال الجهاز في العلبة الأصلية مع وصل الشراء عن طريق شركة الشحن، ويمكن تتبعها.

برجاء الحفاظ على هذا الضمان مع الجهاز الخاص بك بحيث يكون في متناول يديك في حالة مواجهة أي مشكلة.